


Norsap 100

Bar Installation

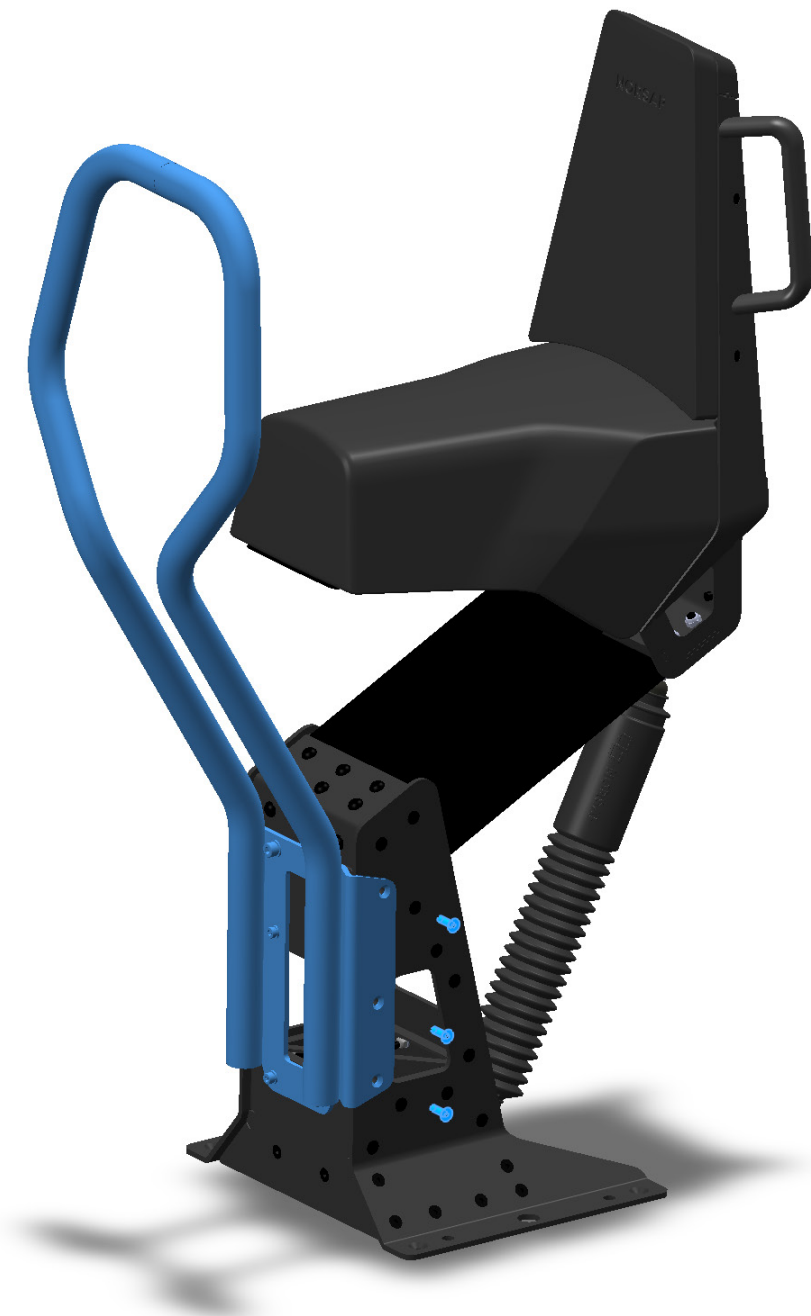

INTRODUCTION


This installation guide will help you install the Bar accessory to the Norsap 100 Jockey.

OVERVIEW OF THE BAR COMPONENTS




Start by unscrewing the 2x M8x20 Button head and 4x M6x20 Countersunk screws.

THESE CREWS ARE NOT USED FURTHER.

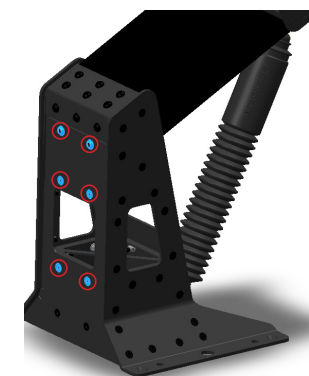

Unscrew 6x M6x20 Countersunk screws.


THESE CREWS ARE USED FURTHER.

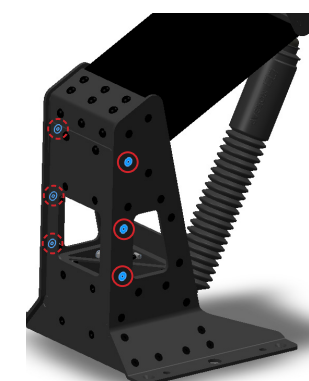

Start by using the supplied 2x M8x25 Cylindrical HEX screws with the M8 Washers.

Continue with the supplied 4x M6x25 Cylindrical HEX screws with the M6 Washers.

Secure the Bar flanges with the 6x M6x20 Countersunk screws, three on each side.

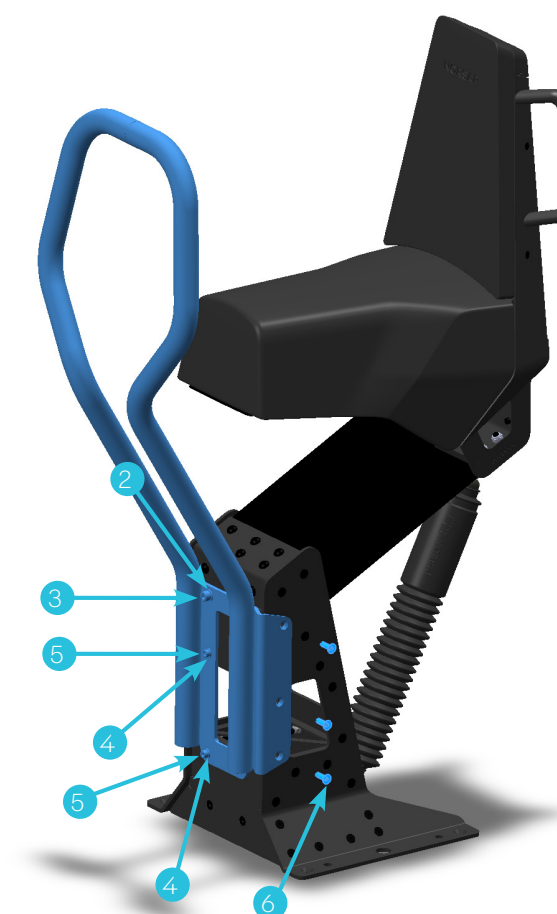



DISCLAIMER

Norsap is not responsible for any damages to your equipment or injuries as a result of a faulty chair or shock absorbing unit. Always have your feet planted on the deck for your safety. The ideal weight for optimal shock mitigation is 80 kg. Do not exceed the max weight of 120 kg

DO NOT DRIVE BEYOND YOUR EXPERIENCE AND COMFORT LEVEL.

